Page: 1 of 2

EL PLUG DIN-M12 Adapter

Item numbers covered by this datasheet

302543 EL PLUG DIN-M12 Adapter

General

This adapter is designed to connect a M12 connector to a DIN 43650A connector for connection to a solenoid. The LED indicator on the connector confirms the power to the solenoid.

A built-in current limiter reduces the risk for overheating and the surge diode prevents surge from the the coil inside the solenoid.

The built-in End Of Line resistor (EOL) allows monitoring of the circuit.

Technical specifications

Voltage Activation: **24 VDC 30 VDC** Max.:

> Min.: See the solenoid specifications Current limiter: 0.5 Amp (self-resetting)

Operating temperature: -25 to +70 °C

Resistance:

6K8Ω (EOL), default (only with "Reserve polarity activation") Monitoring:

It is possible to replace the EOL resistor.

(The resistance > $2K2\Omega$, resistor pin diameter: Ø 0.5 mm)

Indicator:

Power to the solenoid Red LED

Connection: M12 male (4 poles) - DIN43650A (2P + Earth).

(Connection to the M12 Male/4P, use FE item no. 305465, Cable M12-4P/F 2m)

Other information:

Material: Clear polyamide H×WxD: 29x55x27 mm

Weight: 37 g


Markings

Fire Eater Logo

Device item no. 302543

Device name: EL PLUG DIN-M12 Adapter

Schematic

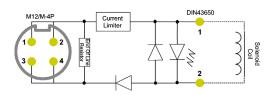

Document: 302543 EL PLUG DIN-M12 Adapter				1	Text
Chantana			DII	2	
Chapters:		ld:	BH	3	
Accessories	_	Rev:2022-	09-07	4	
Vølundsvej 17 DK- 3400 Hillerød				5	
				6	
				7	
	DK- 3400 Hillerød Tel +45 7022 2769 Fax +45 7023 2769			8	
FIRE EATER 1/8				9	
, ,,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,, ,,					

Installation

- Connect the M12-4P/F to the adapter. (Don't connect the adapter to the solenoid)
- Activate the control panel and see if the LED inside the adapter lights up.
- Reset the control panel.
- Connect the adapter to the solenoid by the center screw.





Changing the EOL resistance.

As the EOL resistor is placed in a socket, it is possible to replace the resistor.

- Remove the center screw.
- Use a thin screwdriver to disassemble the plug (DIN43650) by inserting the screwdriver into the small crack and take the plug out. Be careful with the wires. See below picture.
- Remove the resistor and replace it. (Resistance > $2K2\Omega$, pin diameter Ø: 0.5 mm). See below picture.
- Assemble the plug.
- Test the adapter according to the installation.





Document: 302543 EL PLUG DIN-M12 Adapter				1	Text
				2	
Chapters:		ld:	BH	3	
Accessories		Rev:2022	-09-07	4	
Vølundsvej 17 DK- 3400 Hillerød				5	
				6	
				7	
	DK- 3400 Hillerød Tel +45 7022 2769				
FIRE EATER % Fax +45 7023 2769				9	