CHAPTER: Signalisation Page: 1 of 2

Sheet No: Tableau Slave

Alarm indicator Slave

Item numbers covered by this datasheet:

406123 - DK text: BRAND Forlad rummet 406124 - DK text: BRAND Adgang forbudt

406125 - UK text: FIRE

406136 - RO text: Acces interzis

406137 - RO text: Evacuare

406142 - CZ text: Požár Opusite prostor

406143 - CZ text: Požár Nevstupujte

406146 - DK text: BRAND Adgang forbudt- Lindpro logo 406147 - DK text: BRAND Forlad rummet - Lindpro logo 406152 - DK text: BRAND Adgang forbudt, Bravida logo

406152 - DK text: BRAND Adgang forbudt- Bravida logo 406153 - DK text: BRAND Forlad rummet - Bravida logo

406162 - DK text: BRAND Adgang forbudt- Coromatic logo 406163 - DK text: BRAND Forlad rummet - Coromatic logo

406225 - DK text: BRAND Forlad rummet - Falck logo 406226 - DK text: BRAND Adgang forbudt- Falck logo

406253 - DK text: BRAND Forlad rummet - Lotek logo 406254 - DK text: BRAND Adgang forbudt- Lotek logo

526265 - F+UK text: Evacuation immediate, Evacuate immediately - Tyco

526266 - F+UK text: Entree interdite, Emission Inergen, No entry, Inergen release - Tyco



Specifications

Power (activated): 12VDC/43mA 24VDC/41mA

Rated voltage 9-30VDC Stand-by current <1mA Sound level min. 80 dB/1m @24V Ingress protection: IP22

Colour: Gray, RAL 7032 Cable limitation: 0.5 - 2.5 mm²


H×L×D/Weight/Material: 80x120x38 mm / 0.11 kg / ABS

Installation

- 1) Connection to controlpane F112/MasterTableau 2 xEOL resistor 4K7 ohm
- 2) Connection to control panel Sigma XT, EOL resistor 10K ohm
- 3) Connection to control panel where the 'Light' signal is short to the 'Sound'. (Insert a diode (eg. 1N4001) between 'SOUND' and 'LIGHT' to prevent leakage current for the monitoring circuit).

Fig 1. Fig 2. Fig 3.

Installation for ver. A-C.

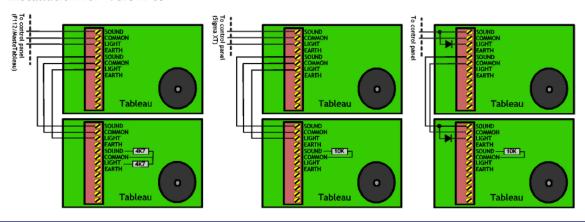

Document: INTEC_Tableau_Slave		1	Text
CATEGORY:	ld: MRP	3	
Electrical comp.	Rev: 22.04.21	4	
Vølundsvej 17 DK- 3400 Hillerød		5	
		6	
		7	
	+45 7022 2769	8	
	+45 7023 2769	9	

Engineering data sheet

CHAPTER: Signalisation Page: 2 of 2

Sheet No: Tableau Slave


Installation continued...

- 1) Connection to control panel F112/MasterTableau, 2 x EOL resistor 4K7 ohm
- 2) Connection to control panel Sigma XT, EOL resistor 10K ohm
- 3) Connection to control panel where the 'Light' signal is short to the 'Sound'.

 (Insert a diode (eg. 1N4001) between 'SOUND' and 'LIGHT' to prevent leakage current for the monitoring circuit).

Fig. 1 Fig. 2 Fig. 3


Installation for ver. D

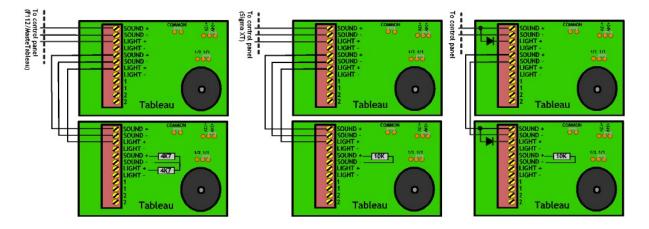

Note, for ver. D

- The SOUND- and LIGHT- are short by the jumper 'COMMON'. It is possible to seperate SOUND and LIGHT by cut the jumper 'COMMON'.
- It is possible to reduce the sound level, by removing the jumper from 1/1 to 1/2
- The number '1' and '1' is short and '2' and '2' is short.

Connection to control panel with seperate SOUND and LIGHT. Note the 'COMMON' jumper is cut.

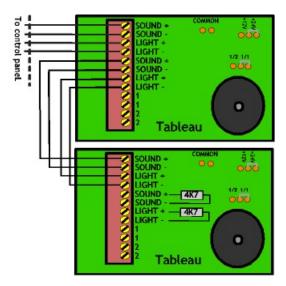

Document: INTEC_Tableau_Slave		1	Text
		2	
CATEGORY:	ld: MRP	3	
Electrical comp.	Rev: 22.04.21	4	
Vølundsvej 17 DK- 3400 Hillerød		5	
		6	
		7	
	3400 Hillerød +45 7022 2769	8	
FIRE EATER % Fax	FIRE EATER % Fax +45 7023 2769		